

快速入门

Quick Start

you + hp




HP Photosmart 8400 series



1 打开 HP Photosmart 打印机的包装

Unpack the HP Photosmart printer

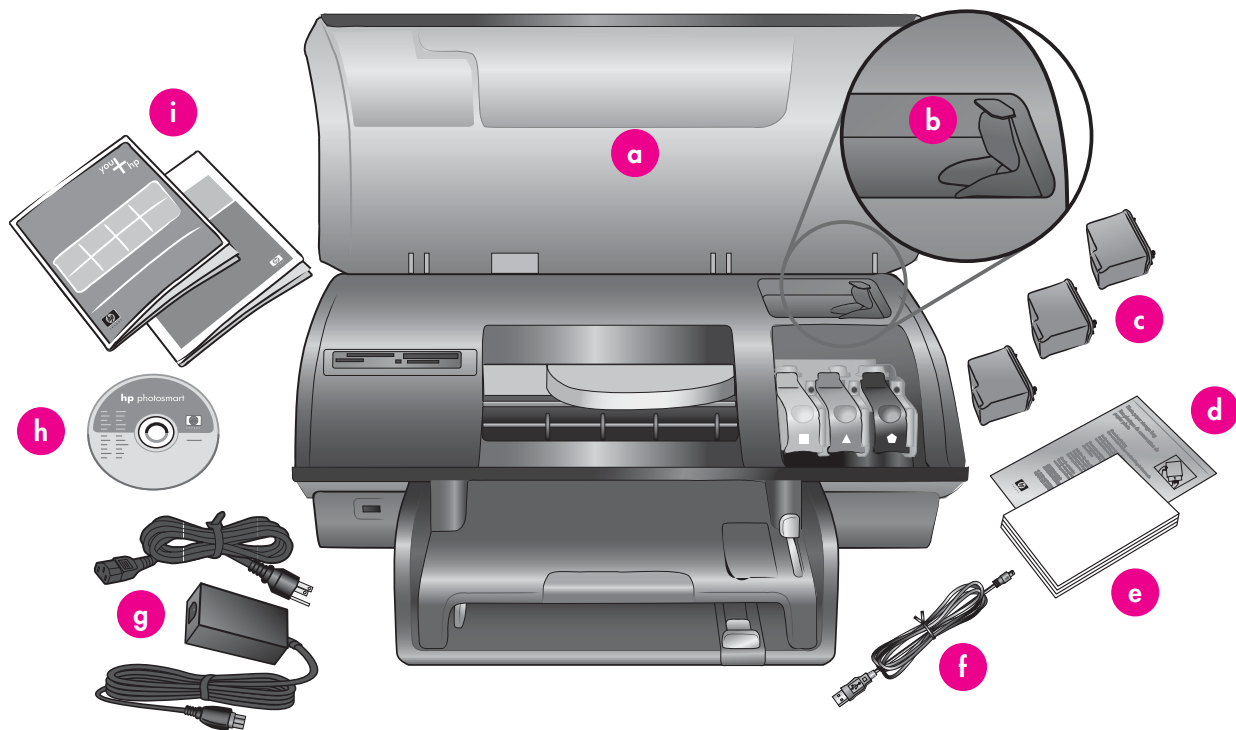

1. 除去打印机上的包装胶带及纸板。
2. 检查包装箱内的物品：
 - a. HP Photosmart 8400 series 打印机
 - b. 打印墨盒保护器
 - c. 打印墨盒
 - d. 照片纸储存袋
 - e. 纸张样品
 - f. USB 电缆
 - g. 电源和电源适配器
 - h. HP Photosmart 软件 CD
 - i. 用户文档

1. Remove the tape and cardboard packaging from inside and around the printer.
2. Check the contents of the box:
 - a. HP Photosmart 8400 series printer
 - b. Print cartridge protector
 - c. Print cartridges
 - d. Photo paper storage bag
 - e. Paper sampler
 - f. USB cable
 - g. Power supply and power adapter
 - h. HP Photosmart software on CD
 - i. User documentation

2

接通电源、设置语言

Connect the power and set your language



1. 将电源线连接到打印机和壁装插座。

重要： 软件安装期间，请勿在没有提示的情况下连接 USB 电缆。

2. 按开启按钮开启打印机。

3. 打印机屏幕上出现 **Select Language** (选择语言) 时，使用导航按钮 ◀ 或 ▶ 突出显示您的语言。

4. 按 **OK** 选择语言。

5. 使用导航按钮 ◀ 或 ▶ 突出显示 **Yes** (是) 进行确认，然后按 **OK**。出现确认屏幕。

6. 打印机屏幕上出现 **Select Country/Region** (选择国家/地区) 时，突出显示您的国家/地区，然后按 **OK**。出现确认屏幕。

1. Connect the power cord to the printer and to a wall outlet.

Important: Do not connect the USB cable until prompted during software installation.

2. Press **On** to turn on the printer.

3. When **Select Language** appears on the printer screen, use Navigation ◀ or ▶ to highlight your language.

4. Press **OK** to select your language.


5. Use Navigation ◀ or ▶ to highlight **Yes** to confirm, then press **OK**. A confirmation screen appears.

6. When **Select Country/Region** appears on the printer screen, highlight your country/region, then press **OK**. A confirmation screen appears.

3

装入普通纸

Load plain paper

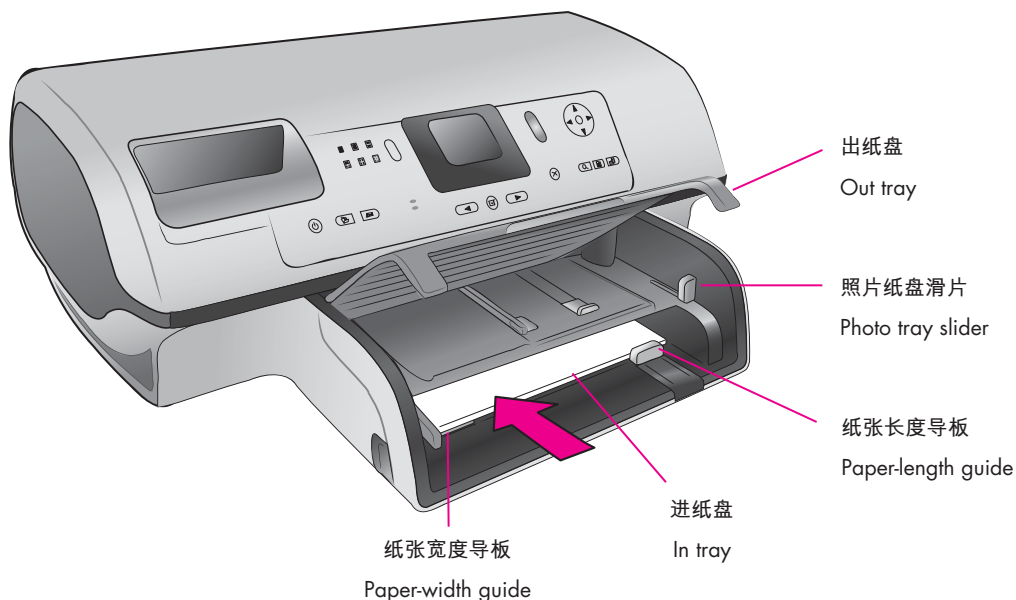

装入普通纸，以校准打印墨盒。

1. 抬起出纸盘。
2. 拉出进纸盘上的纸张长度导板，然后向左推纸张宽度导板到最大限度。
3. 将一叠普通 letter 纸（不超过 100 张）装入进纸盘。
4. 调整纸张宽度导板和纸张长度导板，使其紧靠纸张边缘，并且保持纸张平展。
5. 放下出纸盘。
6. 务必朝打印机的前方拉照片纸盘滑片，使其脱离照片纸盘。

注意：要打印 10x15 厘米（4x6 英寸）的精美照片，请使用照片纸盘。有关详细信息，请参见本小册子第 12 页或《用户指南》。

Load plain paper to align the print cartridges.


1. Raise the Out tray.
2. Pull out the paper-length guide on the In tray and slide the paper-width guide as far to the left as it will go.
3. Place a stack of plain letter paper (no more than 100 sheets) in the In tray.
4. Adjust the paper-width guide and the paper-length guide to fit close to the edges of the paper without bending the paper.
5. Lower the Out tray.
6. Make sure the photo tray slider is pulled toward the front of the printer. This disengages the photo tray.

Note: To print beautiful 10x15 cm (4x6 inch) photos, use the Photo tray. See page 12 of this booklet or the User's Guide for more information.

4


安装打印墨盒

Install the print cartridges

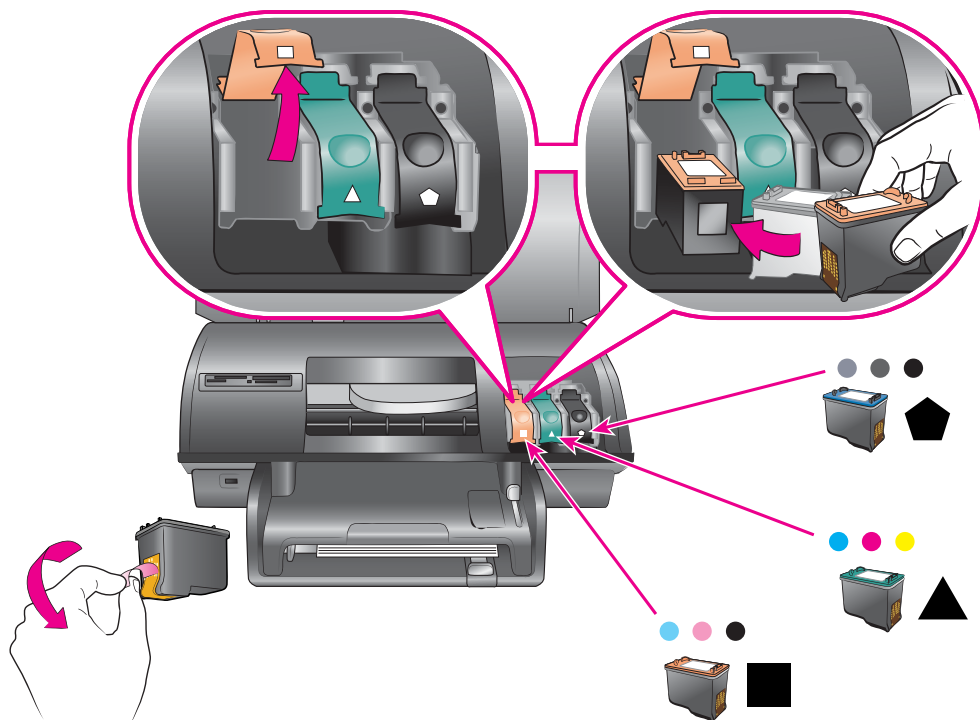

* 存放可选打印墨盒和保护器。

* Store the optional print cartridge and protector.

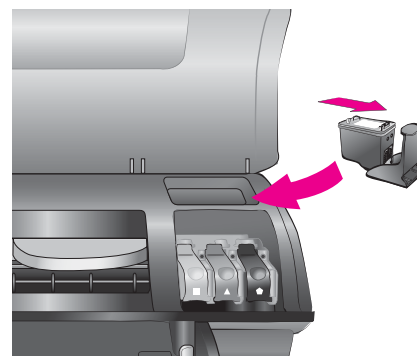

1. 抬起顶盖，向下推打印墨盒门锁，然后向外拉。
2. 打开照片打印墨盒的包装，然后拉起粉色小片，撕掉透明胶带。**请勿触摸墨水喷嘴或铜色触点。**
3. 拿住墨盒，使铜色触点先进入打印机。将墨盒推入金属棒下面的底座左侧。推墨盒，直到卡入到位。
4. 向下推墨盒门锁，直到锁住为止。
5. 重复上述过程，安装三色和灰色照片打印墨盒。
6. 放下顶盖。当打印机屏幕提示打印校准页时，请按控制面板上的 **OK** 按钮。

* 将未使用的打印墨盒存放在此处。

您可以购买可选的黑白打印墨盒。要找到最适合打印作业的墨盒，请查看本小册子封底。


1. Raise the top cover, then push down and pull out the print cartridge latch.
2. Unwrap the Photo print cartridge, then pull the pink tab to remove the clear tape. **Do not touch the ink nozzles or copper-colored contacts.**
3. Hold the cartridge so the copper-colored contacts go into the printer first. Slide the cartridge into the left side of the cradle under the metal bar. Push the cartridge until it snaps into place.
4. Push down on the cartridge latch until it locks.
5. Repeat this process to install the Tri-color and Gray Photo print cartridges.
6. Lower the top cover. Press **OK** on the control panel when the printer screen prompts you to print an alignment page.

* Store any unused print cartridge here.

You can purchase an optional Black print cartridge. Check the back cover of this booklet to find the best cartridges to use for your print projects.

安装 HP Photosmart 软件 (Windows)


Install the HP Photosmart software (Windows)

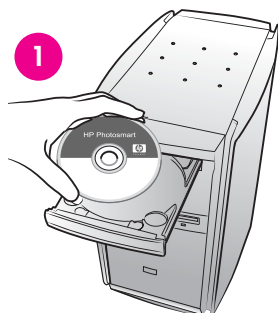

2



3

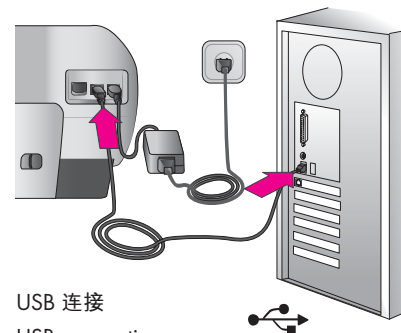

USB 连接
USB connection

仅 Windows

Windows only

仅 USB 安装

如果选择**网络安装**，请遵循《用户指南》的“网络”附录中的指示操作。

重要：请勿在没有提示的情况下连接 USB 电缆。

典型安装可以提供查看、编辑、管理及共享图像的软件。仅当系统内存或硬盘驱动器空间不足时才选择“最小”安装。

1. 将 HP Photosmart CD 插入计算机，然后遵循屏幕指示操作。如果没出现指示，请查找并双击 CD 上的 **setup.exe** 文档。

注意：如果出现**发现新硬件**屏幕（如下所示），请单击**取消**，拔下 USB 电缆，然后重新启动安装程序。



2. 选择 USB 连接类型

3. 出现提示后，请使用 USB 电缆连接打印机和计算机。复制文件会占用几分钟，如果系统版本较旧，时间可能更长。

4. 出现“祝贺”屏幕后，请单击**打印演示页**。

注意：如果安装期间遇到问题，请参见第 8 页的疑难排除。

USB Installation Only

For **Network installation**, follow the instructions in the Network appendix of the User's Guide.

Important: Do not connect the USB cable until prompted.

The **Typical** installation provides software to view, edit, manage, and share images. Only choose **Minimum** if you have limited system memory or hard drive space.

1. Insert the HP Photosmart CD into the computer and follow the onscreen instructions. If instructions do not appear, locate and double-click the **setup.exe** file on the CD.

Note: If the **Found New Hardware** screen (shown below) appears, click **Cancel**, unplug the USB cable, and restart the installation.



2. Choose USB connection type.


3. When prompted, connect the printer to the computer with the USB cable. It may take several minutes to copy files and possibly longer on older systems.

4. When the Congratulations page appears, click **Print a demo page**.

Note: If you experience problems during installation, see Troubleshooting on page 8.

安装 HP Photosmart 软件 (Macintosh)

Install the HP Photosmart software (Macintosh)

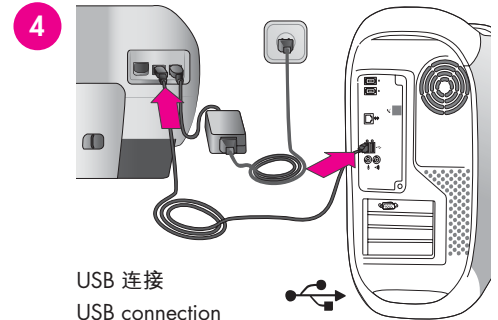

仅 Macintosh

仅 USB 安装

如果选择**网络安装**，请遵循《用户指南》的“网络”附录中的指示操作。

重要：请勿在没有提示的情况下连接 USB 电缆。

1. 将 HP Photosmart CD 插入计算机。
2. 双击 **HP Photosmart** CD 图标。
3. 双击“HP Photosmart Install”图标，然后遵循屏幕指示操作。
4. 出现提示后，请使用 USB 电缆连接打印机和计算机。复制文件会占用几分钟，如果系统版本较旧，时间可能更长。
5. 在 Print（打印）对话框中选择打印机。如果列表中没有显示该打印机，请选择 **Edit Printer List**（编辑打印机列表）添加打印机。

注意：如果安装期间遇到问题，请参见第 8 页的疑难排除。

Macintosh only

USB Installation Only

For **Network installation**, follow the instructions in the Network appendix of the User's Guide.

Important: Do not connect the USB cable until prompted.

1. Insert the HP Photosmart CD into the computer.
2. Double-click the **HP Photosmart** CD icon.
3. Double-click the HP Photosmart Install icon. Follow the onscreen instructions.
4. When prompted, connect the printer and computer with the USB cable. It may take several minutes to copy files and possibly longer on older systems.
5. Select the printer in the Print dialog box. If the printer does not appear in the list, select **Edit Printer List** to add the printer.

Note: If you experience problems during installation, see Troubleshooting on page 8.

软件安装疑难排除

Installation troubleshooting

如果打印机软件安装失败，或安装软件后打印机与计算机无法正常通信，请在此页寻找解决方案。如果仍需帮助，请查看打印机文档或联系客户服务中心。

请检查打印机与计算机之间的所有电缆连线，并确保所用的打印机软件为最新版本。

Windows

问题：插入 CD 时安装软件没有自动运行。

解决方案：在 Windows 的“开始”菜单中选择“运行”。单击“浏览”，然后导航至插入 HP Photosmart 软件 CD 的 CD 驱动器。双击 setup.exe 文档。

问题：如果发现新硬件向导打开后未能识别打印机，则可能是在软件安装尚未完成时连接了 USB 电缆。

解决方案：断开 USB 电缆，重新启动软件安装程序。在安装过程中显示相应提示时连接 USB 电缆。

问题：系统要求检查指出，计算机运行的 Internet Explorer 版本过旧。

解决方案：按键盘上的 **Ctrl + Shift**，然后在 System Requirements（系统要求）对话框中单击 **Cancel（取消）**，忽略该对话框并完成软件安装。安装 HP Photosmart 软件后必须立即更新 Internet Explorer，否则 HP 软件将不能正常工作。**注意：**更新 Internet Explorer 后，不必重新安装 HP 软件。

问题：如果在软件安装过程中计算机停止响应，可能是由于后台正在运行防病毒软件或其他软件程序，因此减慢了安装进度。

解决方案：等待软件完成文件复制，此过程可能会占用几分钟。如果几分钟过后，计算机仍没有响应，请重新启动计算机，然后暂停或禁用所有运行中的防病毒软件，并退出其他所有软件程序，再依照第 6 页的指示重新安装打印机软件。**注意：**计算机重启后，防病毒软件会自动重新打开。

Windows 和 Macintosh

问题：如果安装期间出现 System Requirements（系统要求）对话框，表示计算机系统的某个组件不满足最低系统要求。

解决方案：升级该组件，使之达到最低系统要求，然后重新安装打印机软件。

问题：计算机不能读取 HP Photosmart CD。

解决方案：确保 CD 没有污迹或划痕。如果其他 CD 均能正常工作，只有 HP Photosmart CD 例外，则该 CD 可能已损坏。您可以要求客户服务中心更换一张新 CD。如果其他 CD 也不能工作，则可能需要维修光驱。

If the printer software did not install successfully or if the printer and computer are not communicating properly after software installation, check this page for possible solutions. If you still need help, check the printer documentation or contact Customer Care.

Check all cable connections between the printer and computer, and ensure you are using the most recent version of the printer software.

Windows

Problem: The installation software does not start automatically when the CD is inserted.

Solution: From the Windows Start menu, select Run. Click Browse, and navigate to the CD drive where you inserted the HP Photosmart software CD. Double-click the setup.exe file.

Problem: If the Found New Hardware Wizard opens but doesn't recognize the printer, you may have connected the USB cable before completing the software installation.

Solution: Disconnect the USB cable and restart the software installation. Connect the USB cable when prompted during software installation.

Problem: The system requirements check indicates that the computer is running an outdated version of Internet Explorer.

Solution: Press **Ctrl + Shift** on the keyboard and click **Cancel** in the System Requirements dialog box to bypass the block and complete the software installation. You must update Internet Explorer immediately after installing the HP Photosmart software, or the HP software will not work properly. **Note:** You do not have to reinstall the HP software after updating Internet Explorer.

Problem: If the computer stops responding during software installation, it may mean that virus protection software or another software program is running in the background and slowing down the installation process.

Solution: Wait while the software finishes copying files; this may take several minutes. If, after several minutes, the computer is still not responding, restart the computer, pause or disable any active virus protection software, quit all other software programs, and then reinstall the printer software using the instructions on page 6. **Note:** Your virus protection software will turn back on automatically when you restart the computer.

Windows and Macintosh

Problem: If the System Requirements dialog box appears during installation, it means a component of the computer system does not meet minimum system requirements.

Solution: Upgrade the component to the minimum system requirement and then reinstall the printer software.

Problem: The computer could not read the HP Photosmart CD.

Solution: Make sure the CD isn't dirty or scratched. If other CDs work but the HP Photosmart CD does not, you may have a damaged CD. You can request a new CD from Customer Care. If other CDs don't work, you may need to service the CD-ROM drive.

打印第一张照片


Print your first photo



1

插入存储卡

Insert a memory card

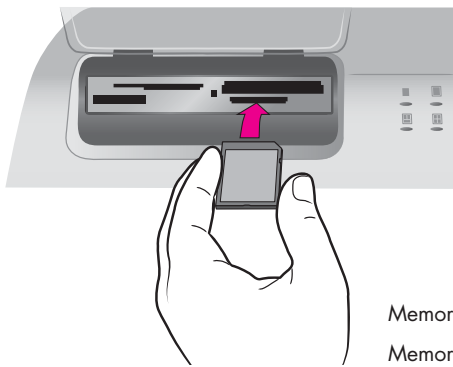

SmartMedia 或 xD-Picture Card
SmartMedia or xD-Picture Card

Microdrive 或 CompactFlash
Microdrive or CompactFlash

Memory Stick
Memory Sticks



MultiMediaCard 或 Secure Digital
MultiMediaCard or Secure Digital

注意： 打印机一次只能插入一张存储卡。

1. 抬起存储卡盖。
2. 正确的一面朝上拿住存储卡。有关使用存储卡的详细信息，请参见《用户指南》。
3. 将存储卡插入相应的存储卡插槽。将存储卡轻轻推入打印机，直到停住为止。

小心： 存储卡不会完全插入打印机。如果强行将存储卡插得过深，可能导致存储卡或打印机损坏。

Note: Insert only one memory card into the printer at a time.


1. Raise the Memory Card door.
2. Hold the memory card so the correct side faces up. For more information about using memory cards, see the User's Guide.
3. Insert the memory card into the appropriate card slot. Gently push the memory card into the printer until it stops.


Caution: The memory card does not insert all the way into the printer. Forcing the memory card into the printer too far may damage the memory card or the printer.


2

选择要打印的照片

Select a photo to print


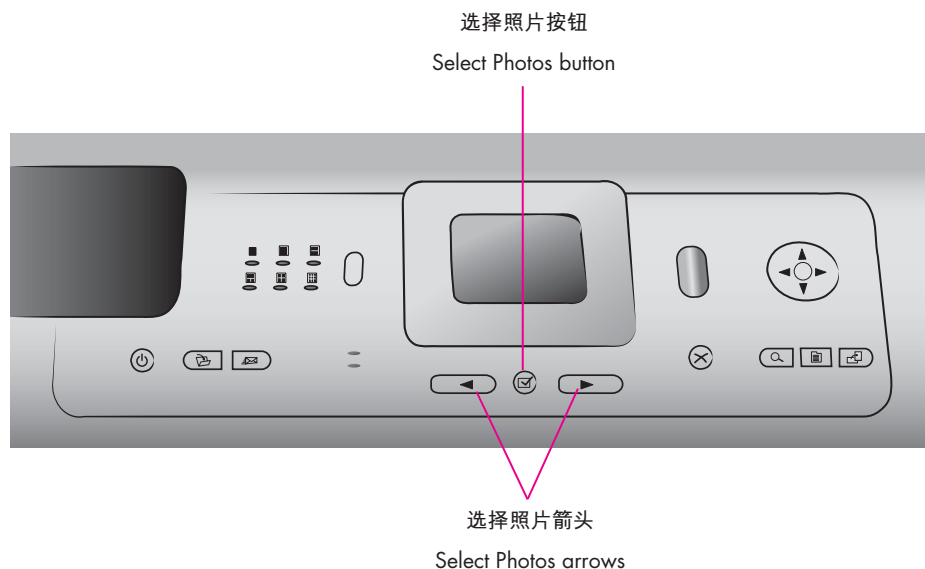


1. 确保将含照片的存储卡插入正确的存储卡插槽。
2. 按**选择照片**箭头，浏览存储卡上的照片。
3. 打印机屏幕上出现要打印的照片时，请按**选择照片** 。

1. Make sure a memory card that contains photos is inserted into the correct memory card slot.
2. Press the **Select Photos** arrows to navigate through the photos on the memory card.
3. When the photo you want to print appears on the printer screen, press **Select Photos** .

3 装入 10x15 厘米（4x6 英寸）的照片纸

Load 10x15 cm (4x6 inch) photo paper

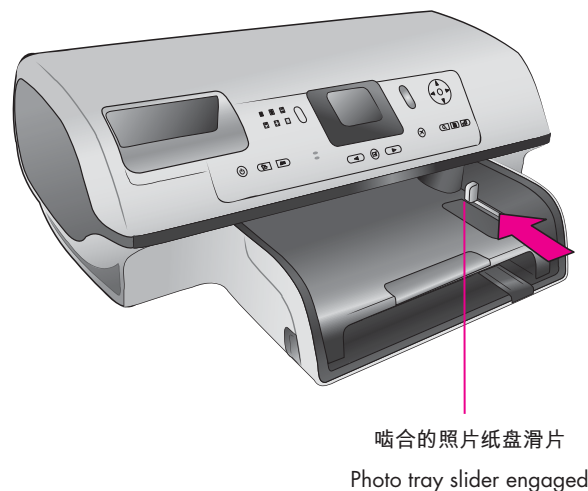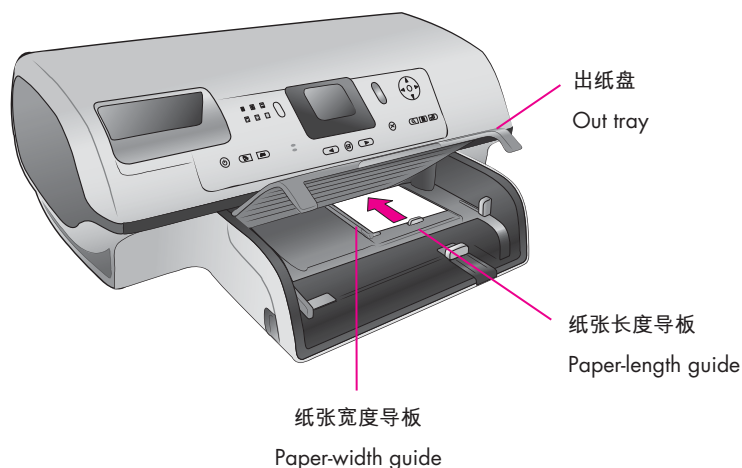


1. 抬起出纸盘。
2. 务必将照片纸盘滑片从打印机上拉开。
3. 拉出照片纸盘纸张长度导板，然后向左推照片纸盘纸张宽度导板到最大限度。
4. 将最多 20 张 10x15 厘米（4x6 英寸）照片纸打印面朝下装入照片纸盘。
5. 调整照片纸盘纸张长度导板和纸张宽度导板，使其紧靠纸张边缘，并且保持纸张平展。
6. 朝打印机的背面推照片纸盘滑片，直到停住为止。照片纸盘从照片纸盘窗口中消失。
7. 放下出纸盘。

1. Raise the Out tray.
2. Ensure that the photo tray slider is pulled away from the printer.
3. Pull out the Photo tray paper-length guide and slide the Photo tray paper-width guide as far to the left as it will go.
4. Place up to 20 sheets of 10x15 cm (4x6 inch) photo paper in the Photo tray so the **side to be printed on faces down**.
5. Adjust the Photo tray paper-length guide and paper-width guide to fit close to the edges of the paper without bending the paper.
6. Push the Photo tray slider toward the back of the printer until it stops. The Photo tray disappears from view in the Photo tray window.
7. Lower the Out tray.

4 打印无边框照片

Print a borderless photo

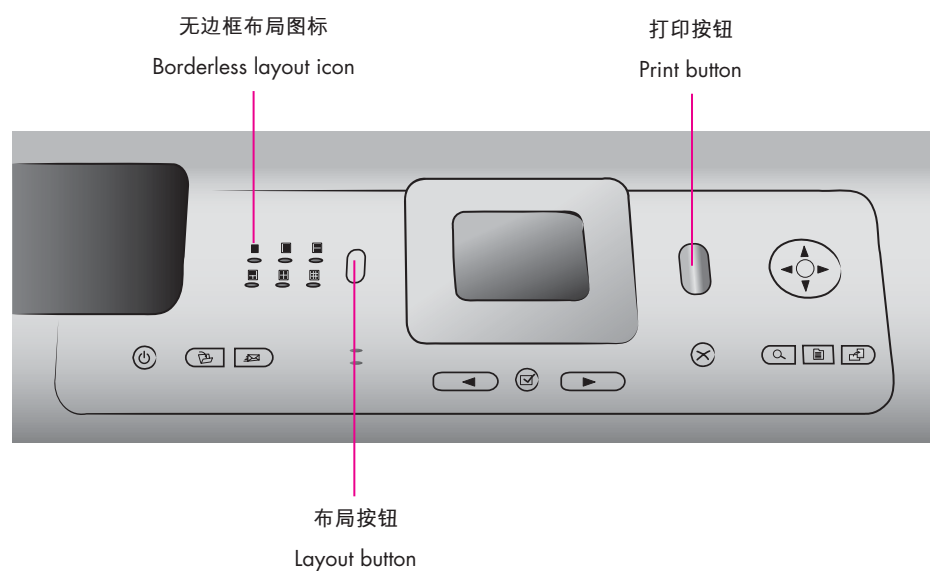

无边框照片
Borderless photo

1. 确保打印机屏幕上出现要打印的照片。
2. 按“布局”按钮选择无边框照片布局。
3. 按“打印”按钮。

1. Make sure the photo you want to print appears on the printer screen.
2. Press the Layout button to select the borderless photo layout.
3. Press **Print**.

迅速提示

Quick tips



打印照片无需计算机

Print photos without a computer



利用 HP Photosmart 8400 series 打印机，无需连接计算机，只用 HP 直接打印数码相机即可打印出精美照片。只需将存储卡直接插入打印机的相应存储卡插槽，在控制面板上进行选择，然后打印照片。

有关无需使用计算机、直接通过数码相机或存储卡打印照片的详细信息，请参见《用户指南》。

The HP Photosmart 8400 series printer allows you to print beautiful photos from an HP direct-printing digital camera without connecting to a computer. Simply insert a memory card directly into the appropriate card slot on the printer, make your selections on the control panel, then print the photo.

For more information about printing photos from a digital camera or memory card without using a computer, see the User's Guide.

用计算机和 HP Image Zone 打印

Print with a computer and HP Image Zone



使用 HP Image Zone 软件制作照片图案时，您可以随心所欲。

- 利用数码照片设计日历、宣传册和活页。
- 制作您自己的相片簿和纪念品。
- 手工定制 T 恤衫、CD 封面及相框。
- 使用 HP Instant Share，通过电子邮件发送照片以及在线共享照片。

有关给自己制作可爱小图案的详细信息，请参见“HP Image Zone 屏幕帮助”。

注意：在 HP Photosmart 打印机软件的安装过程中选择典型后，会自动安装 HP Image Zone 软件、HP Instant Share 按钮功能和屏幕帮助。

The possibilities are endless when you use HP's Image Zone software to create your photo projects.

- Design calendars, brochures, and flyers using your digital photos.
- Create your own photo albums and keepsakes.
- Craft custom T-shirts, CD covers, and picture frames.
- Use HP Instant Share to e-mail photos and to share photos online.

For more information about creating your own fun projects, see the HP Image Zone onscreen Help.

Note: HP Image Zone software, the HP Instant Share button feature, and onscreen help are installed automatically when you choose the Typical installation of the HP Photosmart printer software.


安装最适合打印作业的打印墨盒

Install the best print cartridges for your project



三色、照片和灰色照片

Tri-color, Photo, and Gray Photo

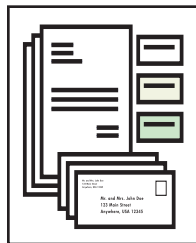

三色、照片和黑白

Tri-color, Photo, and Black



三色、照片和灰色照片

Tri-color, Photo, and Gray Photo




重要：务必将未使用墨盒存放在打印机自带的打印墨盒保护器中。

Important: Always store the unused cartridge in the print cartridge protector that came with the printer.

需要更多信息吗？

Need more information?

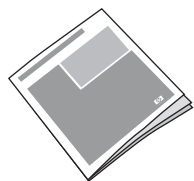

用户指南

User's Guide



屏幕 Photosmart 打印机帮助

Onscreen Photosmart Printer Help



www.hp.com/support

www.hp.com



Q3388-90165



新加坡印刷，2004 年 7 月 • v1.0.1 • 以再生纸印刷
© 2004 Hewlett-Packard Development Company, L.P.
Printed in Singapore 07/04 • v1.0.1 • Printed on recycled paper
© 2004 Hewlett-Packard Development Company, L.P.



invent